

Change DVD Player Region – Doc. B

DVD REGION SETTINGS

The DVD Player included with this model of TV is preset to Region 2 to allow viewing of all DVD's made for Region 2 countries. This includes Japan, Europe (inc UK), South Africa, and Middle East (including Egypt)

If you wish to watch DVD's from another region, i.e you are moving home, you can change the region code. Please note that changing the region code is entirely at the owners risk. Any fault developing with the DVD decoder/player during or after changing region code is that risk of the end user and no claims, be it of a legal or warranty nature, will be entertained by the manufacturer.

Checking / Changing Region Settings.

Below is a guide how to check which region the DVD player is preset to. Changing the DVD player to Region 0 will allow viewing of DVD movies for any region. This DVD player is only licensed for Region 2 DVD's and the manufacturer accepts no liability whatsoever for any changes made by end users.

- Ensure you are on the DVD source of the TV.
(DVD will be on the screen in front of you)
- Make sure you have **not** loaded a DVD/ CD into the TV
- When you see No Disc displayed on the top left hand corner, on the remote control, press the numbers 9 7 3 5
- Scroll to Region, press R/Hand arrow select Region 0 and press OK or ENTER
- Select region (0 for all regions)
- Then scroll down to EXIT SETUP or EXIT MENU and press OK or ENTER on the Remote control to exit the menu
- Then switch the TV off and then switch back on again.